



How to turn on 4G Voice on iPhone devices

Go to **Settings** > **Cellular** > **Enable 4G** > Select **Voice & Data**

